


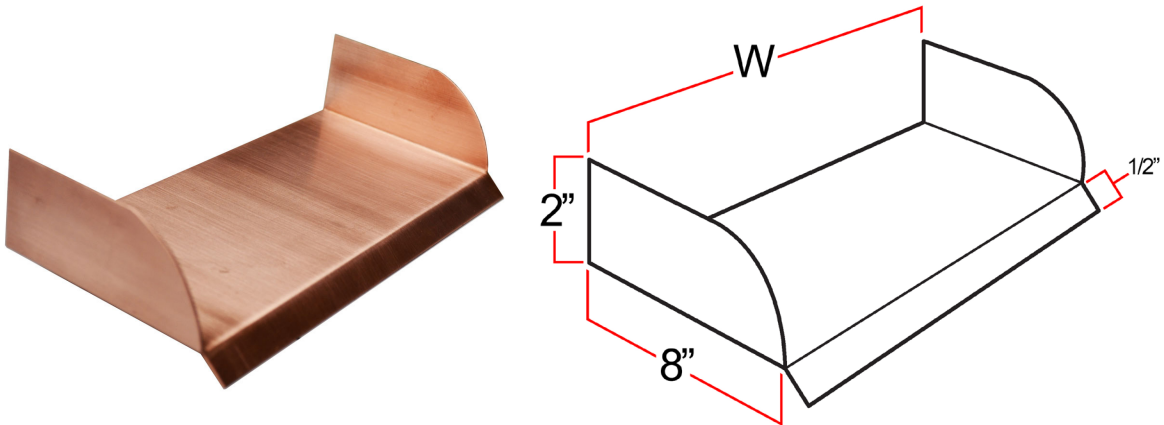

Straight Flow Scupper Manual



INSTALLATION

- > Make sure you have a scupper cavity that is 3/16" bigger than that of your scupper size in the width and height aspects.
- > The handmade nature of the scupper might mean you have to adjust your measurements accordingly.
- > Position the scupper into the scupper cavity according to the desired scupper overhang. TOP recommends that you have a minimum of 2" of scupper wall/manifold inside of the scupper cavity.
- > Use a strong adhesive to hold down the scupper to the desired location.

CARE

If scupper starts to become loose at any point repair with the adhesive and lock back into place.

WARRANTY

1 Year Limited Warranty - For Manufacturer Defects.