

DESIGN SPECIALTIES

STEEL MANTEL INSTALLATION INSTRUCTIONS

CAUTION:



INSTALLER MUST MAKE SURE THAT THE PROPER ATTACHMENT HARDWARE IS USED AND THAT WALL CLEAT IS ATTACHED SOLIDLY ENOUGH TO SUPPORT MANTEL AND WHATEVER WEIGHT IT WILL CARRY.

WHAT YOU GET:
MANTEL/SHELF
WALL CLEAT
(5) SCREWS (FST0163)




YOU WILL NEED:

A DRILL
1/8" DRILL BIT
LEVEL
STUD FINDER
TAPE MEASURE

SCREWS SUPPLIED ARE SUITABLE
FOR INSTALLATION INTO WOOD STUDS

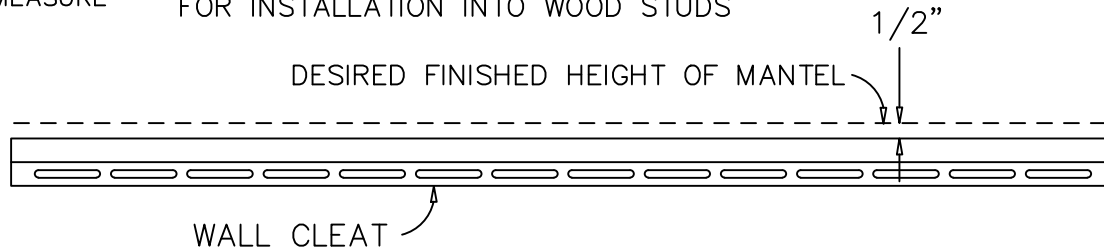

MARK THE WALL WHERE THE LOCATION OF THE MANTEL WILL BE.
USE A STUD FINDER TO LOCATE WALL STUDS.
AND MARK LOCATIONS OF STUDS.
PLACE WALL CLEAT ON WALL 1/2" DOWN FROM WHERE THE TOP OF THE MANTEL IS TO BE.
USING A LEVEL ON THE WALL CLEAT, MARK THROUGH THE OBLONG HOLES WHERE THE WALL STUD LOCATIONS ARE.
USING A 1/8" DRILL, DRILL PILOT HOLES FOR SCREWS.
PLACE WALL CLEAT ON LOCATION AND SECURE IT TO THE WALL.

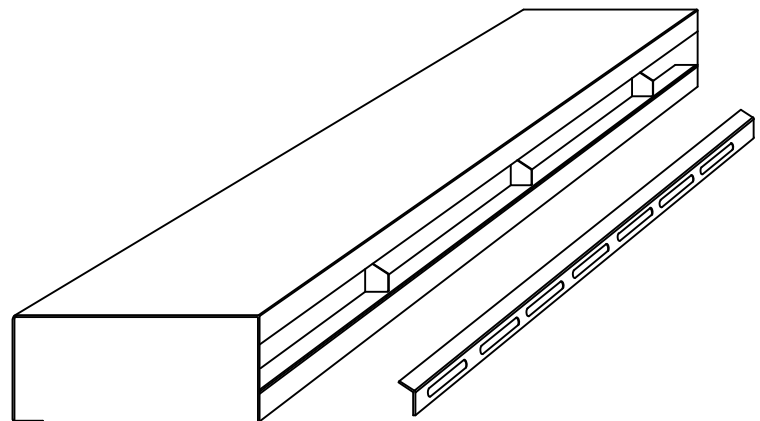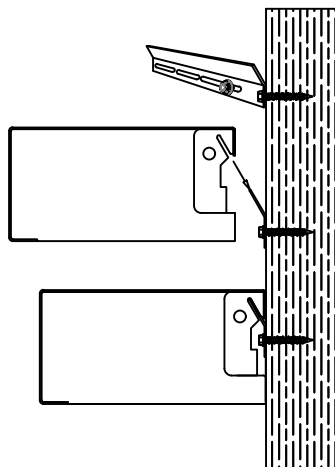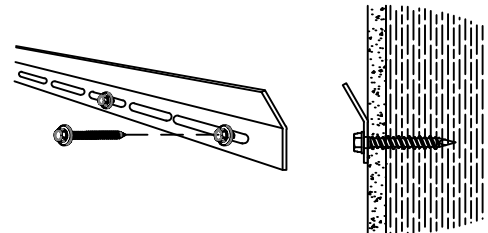

PLACE THE MANTEL INTO WALL CLEAT AND FIRMLY TAP DOWN IN PLACE.