



Newport Installation Instructions

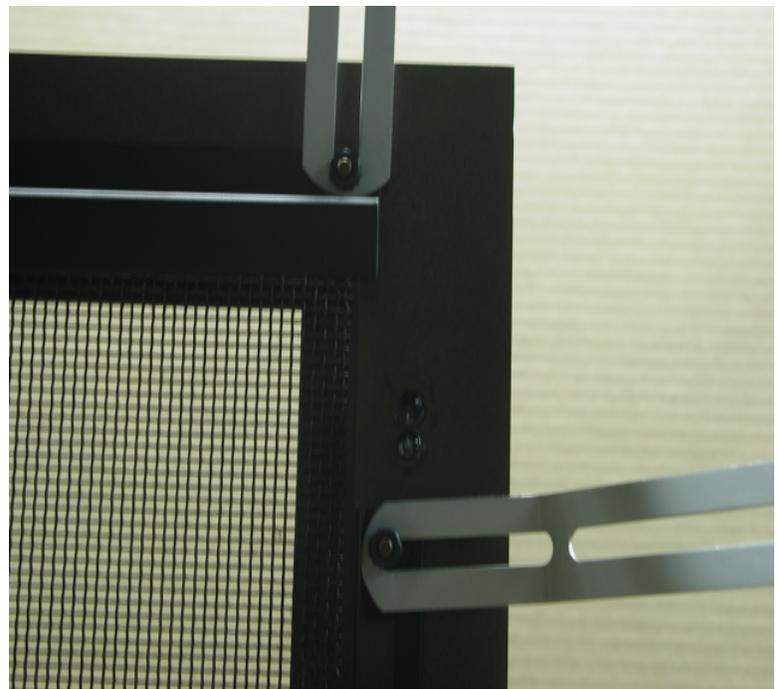

Attach flex brackets to back of frame, top and bottom or side mount using 4 black nuts, attach to studs. Use 4 sheet metal screws to attach to ZC boxes or 4 anchors and screws for Masonry applications.

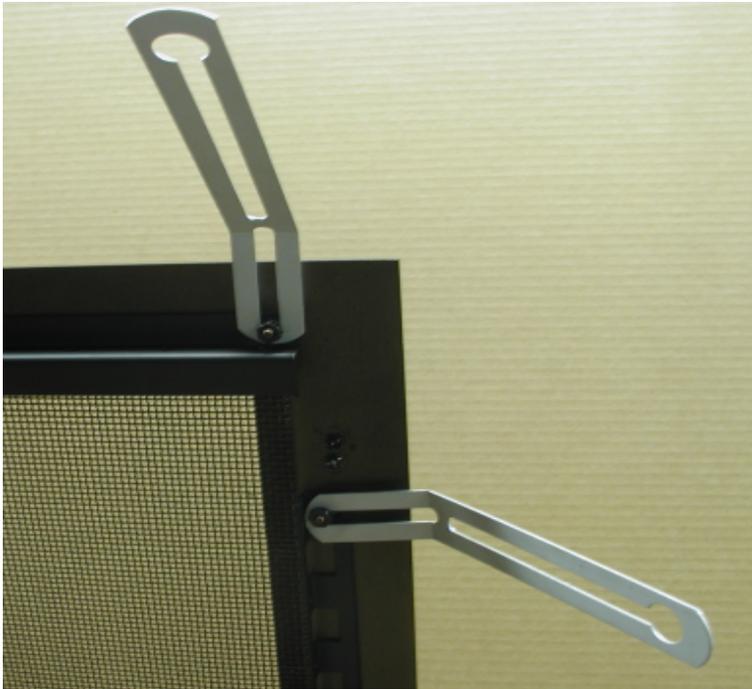